

CableMaster CM400

Voice, Data & Video Tester

- Tests Voice (6 wire), Data (8 wire) and Video (coax)
- Easy to read, extra large 7-segment LCD screen with large icons
- Tone generation over voice, data and video cables, with 4 different tones
- RJ (Voice & Data) master remote stores in bottom of case
- Maps 19 locations at one time
- Tests and indicates pins with shorts, opens, reversals, miswires and split pairs
- Displays “Pass” icon for correctly wired T568A/B and crossover/uplink
- Displays “Pass” icon for correctly wired 6-pin telephone plus “Rev” for reverse-pinned
- Low power consumption for long battery life
- Auto power-off



USER MANUAL



CableMaster 400

TABLE OF CONTENTS

ABOUT THIS MANUAL	3
Symbols and Icons.....	3
Terms and Descriptions.....	4
Safety Information	5
ACCESSORIES.....	6
DESIGN FEATURES	7
CABLEMASTER DESCRIPTION.....	8
Jacks and Connectors.....	8
Remote Tester	8
LCD Display Screen.....	9
Keypad	12
OPERATIONS	14
Turning the Unit On/Off.....	14
Automatic Power Down	14
Cable Testing General Guidelines.....	14
Testing Voice Cables.....	15
Testing Video Cables	17
Testing Data Cables	18
Using ID Mode	19
Using Tone Mode	20
MAINTENANCE.....	22
Battery Replacement	22
Cleaning	22
Storage.....	22
CUSTOMER SERVICE	23
Contacting Softing IT Networks.....	23
Additional Accessories	23
Warranty Information	24
Registration.....	24
Disposal.....	24
Returns.....	24
SPECIFICATIONS	25
APPENDIX: CABLE WIRING AND DISPLAY SCREEN	26



ABOUT THIS MANUAL




The CableMaster is a handheld device used by contractors, repair technicians, and other authorized users to test, identify, and detect potential faults in voice, video and data cables. The test unit offers the following three features:

Feature	Function
Continuity Testing	Discerns if the voice, data, and/or video cables being tested have been wired correctly with no faults.
ID Mapping	Identifies cables and determines their exact location.
Tone Mode	Verifies cable wiring paths by sound.

SYMBOLS & ICONS

The following symbols, listed in Table 1, are used throughout the manual or in the display screen of the test unit to help you avoid personal injury and potential damage to the test equipment.

Table 1. Symbols and Icons

Symbol	Definition
	Warning: Potential for personal injury Caution: Potential for damage or destruction to equipment.
VOLTAGE	Voltage detection symbol. Immediately disconnect cables from the main or remote tester.
	Conformité Européenne. Conforms with European Economic Area directives.
	Disposal information

CableMaster 400

TERMS AND DESCRIPTIONS

Table 2 defines the terms used throughout the document and provides information to assist you with proper operation and understanding of the test unit.

Table 2. Terms and Descriptions





Terms	Description and Uses
Video cable	Coax cable with a single pair (2 pin) wiring system <ul style="list-style-type: none">• The pins are paired in order of continuity• Test this cable using the F-Connector on the main test unit
Data cable	Data cables with a 4 pair (8 pin) wiring system <ul style="list-style-type: none">• Pin pairs are not wired by continuity, but follow a cabling standard• Test this cable using the RJ45 adaptor on main test unit
Cabling Standards	Standard wiring design of a cable. The pairing of wires differs according to cable type. <ul style="list-style-type: none">• Many standards adopt a wire coloring system to help ensure proper pin pairing• Common data cable wiring standards are known as T568A/B
Voice cable	Phone cable with a 3 pair (6 pin) wiring system <ul style="list-style-type: none">• The pins are paired by continuity, except in the case of a reverse pinned voice cable• Use the RJ11 adaptor on the main test unit to test a voice cable
Pins	Individual wires within a cable Two pins paired together are known as pin pairs
F-Connector	Jack for a coax cable
RJ Jack	Connector for a voice or data cable. RJ stands for Registered Jack. <ul style="list-style-type: none">• The connector can be located on the tester itself. When mounted on a wall, the RJ Jack is known as a wall port.• RJ11 is voice jack• RJ45 is data jack
RJ Plug	Cable end that is inserted into a wall port or the test unit



SAFETY INFORMATION

To ensure safe operation of the CableMaster, follow the instructions carefully and observe the warning and caution messages listed in Table 3. Failure to observe warnings can result in severe injury or death and can cause damage to the tester.

Table 3. Safety Information



Notification	Definition
	The CableMaster is designed for use on unenergized cabling systems. Connecting the CableMaster to live AC power may damage the unit and pose a safety hazard for the user.
	Poorly terminated RJ plugs have the potential to damage the jacks on the CableMaster. Visually inspect an RJ plug before inserting it into the main or remote tester to ensure you are placing the plug into the appropriate jack.
	The cable's contacts should always be recessed into the plastic housing of the receiving jack. Plugging a 6-position phone plug into the 8-position data jack on the tester has the potential to damage the outer-most contacts of the jack. Insert the cable into the appropriate connector on remote or main tester.
	Do not place equipment and its accessories in the trash. Items must be properly disposed in accordance with local regulations

CableMaster 400

ABOUT THIS MANUAL

The accessories listed in Table 4 below are provided with your purchase of the CableMaster. These accessories must be used when operating the unit in order to properly test and identify cables. Refer to the Additional Accessories section for a listing of additional products that can help make testing easier.

Table 4. CableMaster Accessories

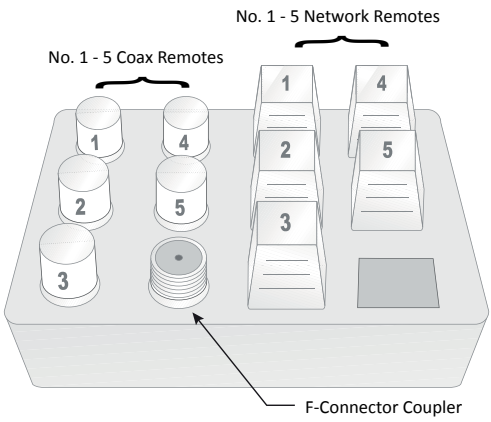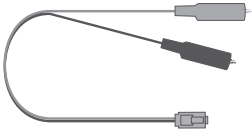Accessory	Description
 <p>The diagram shows a tray containing five numbered Coax Remotes (1-5) and five numbered Network Remotes (1-5). An F-Connector Coupler is also shown with an arrow pointing to it.</p>	<p>1-5 Network/Coax ID Remotes with F-Connector Coupler, F81</p>
 <p>The diagram shows a cable assembly with an RJ45 connector on one end and Alligator Clips on the other, with a length of 12 inches.</p>	<p>Cable assembly, RJ45 to Alligator Clips – 12"</p>



DESIGN FEATURES

- Easy to operate
- Extra large seven-segment LCD screen with icons that clearly display test results
- Tests data (8-wire), voice (6-wire) and video (2-wire) cabling systems
- RJ (Voice & Data) test remote stores in bottom of case plus a video ID remote is included
- Wire mapping remotes for mapping cable runs to wall outlets accompany the CableMaster
- Cable test results displayed in wire map format with connector pin numbers
- Tests and indicates pins with shorts, opens, reversals, miswires and split pairs
- Displays “Pass” icon for correctly wired T568A/B data cables
- Shows “X-over” for correctly wired cross-over (uplink) data cables and displays “Rev” for correctly wired reverse-pinned voice cables
- Tone generator has a selectable tone cadence which is applied to selected pins or pin pairs
- Conserves power and supports long battery life with Auto-off feature and battery low icon
- Video and data cables can be connected to the tester at the same time to improve testing efficiency
- Patch cables may be tested without detaching the remote from the main tester

CableMaster 400

CABLEMASTER DESCRIPTION

The CableMaster, illustrated in Figure 1, has four main parts: the connectors, the LCD display screen, the keypad, and the remote tester.

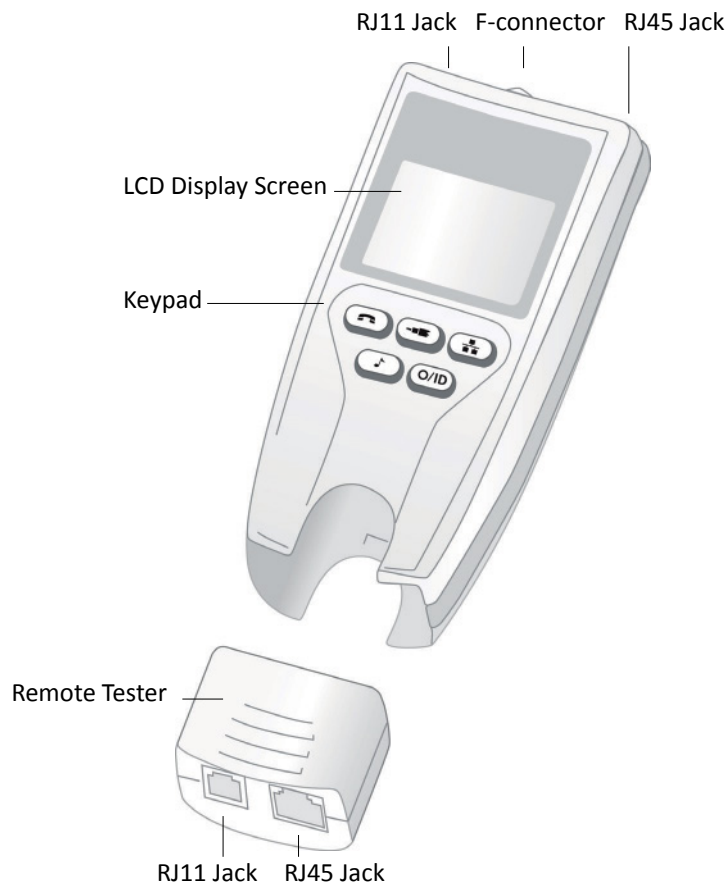


Figure 1. CableMaster

JACKS AND CONNECTORS

The main unit connectors located at the top of the CableMaster include two RJ Jacks for data and voice cables and one F-Connector for video cables.

REMOTE TESTER

The remote tester can be detached from the main unit to test cables over a distance. The remote test unit has two RJ Jacks for data and voice cables and is integral to the testing process. Refer to the Operations section of the manual for detailed instructions on cable testing.

JACKS AND CONNECTORS

The main tester has a high contrast LCD display screen, shown in Figure 2 below. The LCD screen displays the following: test mode, pass/special cables, cable faults, shield indicator, battery capacity, locator ID#, voltage detection, and wire mapping.

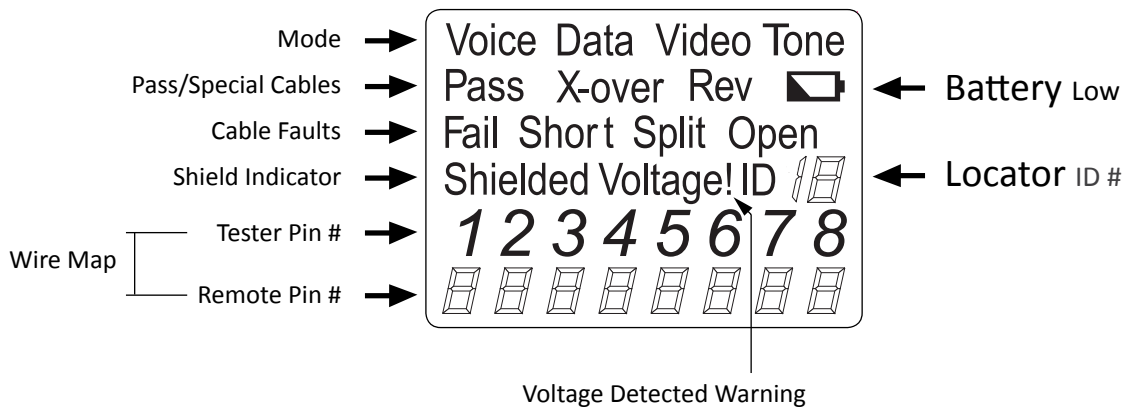


Figure 2. LCD Display Screen

TEST MODE

The top line of the display shows the cable type test mode (voice, data, and video).

STONE MODE

Tone Mode must be used with a tone tracer probe. The probe allows you to trace cable wiring paths and identify potential faults by sound. The following icons appear in the display screen when Tone Mode is in use:

Cadence - There are four cadence options: HI, LO, Hi-Lo1, and Hi-Lo2. The last selected cadence appears in the lower right corner of the display screen.

Tone Path Selection – When tracing a video cable, the selected cadence is transmitted on the coax pin (“P”), the coax shield (“S”), or both the pin and shield (“PS”). The icons related to the current tone path selection appear in the lower left corner of LCD display screen.

Note: The tone tracer probe is sold separately (refer to the Additional Accessories section)

PASS/SPECIAL CABLES

The second row of the display screen corresponds to the wiring structure of the cable being tested. The CableMaster displays the following three icons:

CableMaster 400

Pass – The “Pass” icon appears if the cable has a properly wired 4-pair T568A/B data cable, a 3-pair one-to-one wired voice cable, or a video cable with no faults.

X-over – This icon displays if a properly wired cross-over (uplink) data cable is recognized. A crossover cable is a data cable with the 1-2 pair wired to the 3-6 pair. This allows an Ethernet NIC card without MDIX capability to communicate by wiring the transmit end of the cable to the receiver on the opposite end of the cable.

Rev – The “Rev” icon is displayed when the cable is a properly wired reverse-pinned voice cable. A reverse-pinned voice cable has all wires on one cable connector ordered by continuity and the connector on the opposite end of the cable has the pins located in a reversed order. Pin 1 connects to Pin 6 on the opposite connector; Pin 2 connects to Pin 5 and so on.

CABLE FAULTS

There are four possible error conditions on the cable: Fail, Short, Split, and Open. Cable faults appear in the third row of the LCD screen. The faults are described in Table 5 below. Refer to the Appendix for a visual representation of cable faults and how they appear in the Wire Map.

Figure 2. LCD Display Screen

Cable Fault	Description
Fail	<p>A “Fail” error occurs when a cable’s wire connections do not follow cabling standards.</p> <ul style="list-style-type: none">• This icon will illuminate when any cable fault is detected• Any miswired pin pairs will flash in the Wire Map
Open	<p>An “Open” error means a wire connection within the cable is not continuous through the length of the cable.</p> <ul style="list-style-type: none">• The pin pairs with errors will flash in the Tester Pin # field of the Wire Map and will be blank in the Remote Pin # field
Short	<p>The “Short” icon appears when two or more wires within a cable are electrically connected. This is also known as a short circuit.</p> <ul style="list-style-type: none">• A dash (-) will appear in the Remote Pin # field to indicate the shorted pin pairs• This dash will appear directly below the flashing pairs in the Tester Pin # field
Split	<p>A split, also known as an AC signal fault, occurs when wires are not twisted together according to their cabling standard.</p> <ul style="list-style-type: none">• This miswire commonly occurs with pins 3, 4, 5, and 6 in a data cable• The pin pairs experiencing the split will flash in the Remote Pin # fields of the wiring map



Note: Open and Short errors take precedence over miswires and the appropriate icon(s) will appear in the display screen.

If the pairs displayed in the Wire Map are flashing, the cable has a problem (split, open, short, or fail). If the pairs are not flashing, the cable is wired properly and a "Pass" icon will appear.

The accuracy of the CableMaster is limited to identifying the pin pairs with errors. It cannot identify the individual pin experiencing the error.

SHIELD INDICATOR

The "Shielded" icon, appearing in the fourth line of the LCD screen, illuminates when a shielded data cable is properly wired at both ends. The icon flashes if the shield is shorted to a pin in the cable. The shorted pins display in the Wire Map and the "Short" indicator appears.

WIRE MAP: TESTER PIN #

The top line in the Wire Map shows the pin numbers of the cables connected to the main tester. If a cable fault is detected, the pin pairs experiencing the error will flash.

WIRE MAP: REMOTE PIN #

The bottom line of the Wire Map corresponds to cables connected to the remote tester. The Remote Pin # field will show if the connected cables have errors (short, open, fail, and split). The appearance of dash lines indicates shorted pins. No number displayed in the Remote Pin Number line indicates Open pins. Pin pairs will flash if they are split.

BATTERY LOW

The battery low symbol illuminates when the battery is nearing depletion. The symbol flashes when the battery needs to be replaced.

Note: Results may be unreliable at this point so the battery should be replaced.

CableMaster 400

LOCATION ID

The “ID” symbol, located in the third line of the LCD screen, appears when the CableMaster is in Video, Data or ID Mode. When using the wire mapping remotes, the “ID” icon will turn on and the remote ID number will display to its right. The ID number is not displayed if an error occurs, such as “Open” or “Short”.

VOLTAGE DETECTED WARNING

If voltage is detected on any of the cable connectors, the “Voltage!” icon flashes. A check for voltage is performed before each test and if found, no test is run. If the icon appears, the tester should be disconnected immediately from the source of the voltage. The tester automatically powers down in 90 seconds if the detected voltage is not removed.

KEYPAD

The CableMaster is equipped with five buttons, illustrated in Figure 3. Some buttons have more than one function. The functions are explained in Table 6. For each cable test, results are displayed in the Wire Map of the LCD display screen.

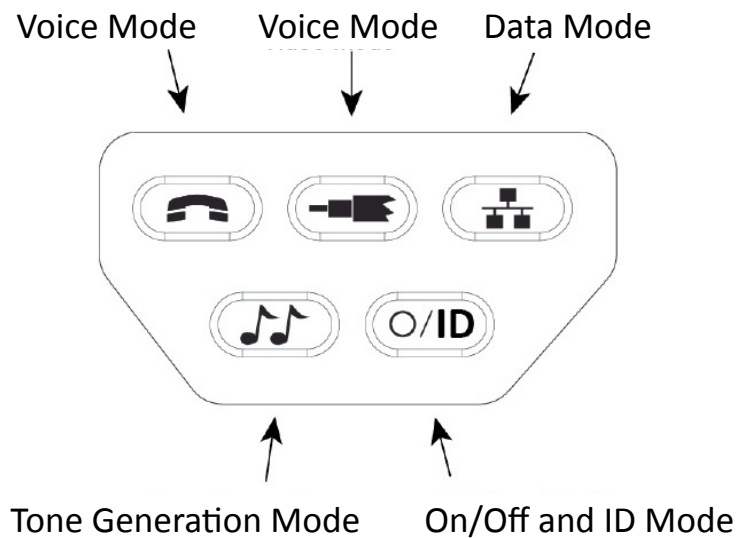
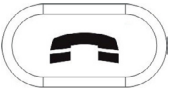

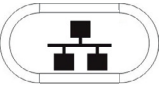




Figure 3. Keypad

Table 6. Keyboard

Keypad Button	Description
 Voice	<p>The Voice button tests voice cables.</p> <ul style="list-style-type: none"> • Each press of the button causes one test to be run on the 6-position RJ jack • Hold the button down to start/stop continuous testing
 Video	<p>The Video button tests coax cables terminating at an F-Connector.</p>
 Data	<p>The Data button tests data cables.</p> <ul style="list-style-type: none"> • Each press of the data button runs one test on the 8-position RJ jack • Hold the button down to start/stop continuous testing
 Tone	<ul style="list-style-type: none"> • The Tone Mode button is used with a tone tracer probe to identify faults in cables via sound. • One press of the button sends an audio tone from the tester through the selected wire pairs of the cable being tested
 Power/ ID Mode	<p>This button has two functions: Turning the unit On/Off and ID Mode.</p> <p>POWER</p> <ul style="list-style-type: none"> • In any test mode, one press of the O/ID button turns the CableMaster Off • Subsequent presses of the button turn the unit On/Off <p>ID MODE ID Mode is used with wire mapping remotes to identify cable runs.</p> <ul style="list-style-type: none"> • When the CableMaster is Off, one press of this button turns the unit on and begins ID mode • ID Mode scans all cable types (voice, video, and data) and displays any detected wire mapping remotes

Note: To run a continuous test on data or voice cables, press and hold down the corresponding mode button until "LOOP ON" appears. Tests will execute until another cable test mode or O/ID buttons are pressed or after 5 minutes of no change in the test result.

CableMaster 400

OPERATIONS

To ensure safe operation of the CableMaster, follow the instructions carefully and pay attention to the warning and caution symbols. Failure to observe warnings can result in severe injury or death and can cause damage to the tester.

TURNING THE UNIT ON/OFF

Turn Unit On

Press the desired cable type button (voice, video, data, tone or ID) to start testing in that mode immediately.

Turn Unit Off

Press the O/ID button to power down the tester. The display screen will go blank

AUTOMATIC POWER DOWN

The CableMaster automatically turns off to conserve battery power. The automatic power down feature varies according to which cable test mode is in use (see Table 7). The power down timer is restarted whenever a button is pressed.

Figure 2. LCD Display Screen

Test Mode	Function
Voice	18 sec. (5 minutes when looping)
Data	18 sec. (5 minutes when looping)
Video	5 minutes
ID	5 minutes
Tone	60 minutes

CABLE TESTING GENERAL GUIDELINES

The CableMaster tests video, data, and voice cables to detect potential faults, shows a cable's wire pairing, and examines the physical properties of a cable.

Important Points to Note

- The RJ jacks for data and voice cables share internal connections within the tester. Only one RJ cable can be connected at a time for accurate cable test results.
- An RJ cable and a coax cable may be connected at the same time. In ID mode, all connectors on the Tester may be connected at the same time.
- To easily toggle between cable test modes, press the desired cable type button.

IMPORTANT POINTS TO NOTE



The CableMaster is designed for use on unenergized cabling systems. Connecting the CableMaster to live AC power may damage the unit and pose a safety hazard for the user.



Poorly terminated RJ plugs, the head of a cable, have the potential to damage the jacks on the CableMaster. Visually inspect the RJ plug before inserting it into the tester to ensure you are inserting the plug into the appropriate jack of the remote-end or tester-end of the unit (ex. data cable plug fits into data jack on the unit).



The cable's contacts should always be recessed into the plastic housing of the receiving jack. Plugging a 6-position phone plug into the 8-position data jack on the tester has the potential to damage the outer-most contacts of the jack. Insert the cable into the appropriate connector on the remote end or tester end of the unit.

CABLE TESTING GENERAL GUIDELINES

The CableMaster tests video, data, and voice cables to detect potential faults, shows a cable's wire pairing, and examines the physical properties of a cable.



Plug the cable into the appropriate jacks on the main tester and remote tester. Failure to do so can damage the connectors.

CableMaster 400

1. Insert one end of the cable into the RJ11 jack on the main tester.
2. Place the other end of the cable into the the RJ Jack on the remote tester.
3. Single Test: To run a single test on the 6-position connected voice cable, press the VOICE MODE button. The following appears in the LCD display screen (see Figure 4):
 - The “Voice” icon appears in the upper left corner.
 - The cable wiring structure displays (Pass, X-over, or Rev).
 - The “ID” icon appears with remote #1 displayed as the cable is connected to the remote tester.
 - The Wire Map fields update to indicate any cable faults. A perfectly wired voice cable will display all pins (1-6) in both fields of the Wire Map display.

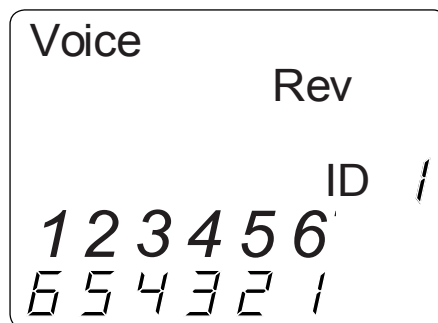



Figure 4. Voice Mode Test with Rev Cable

4. Continuous Test  run a continuous test, press and hold down the VOICE MODE button until “LOOP ON” appears in the display (see Figure 5 below). When looping is active, three small moving “bars” appear on the right side of the display screen. The display screen will update with the icons and values that appear during a single test (see Figure 4). To turn test looping OFF, press and hold down the VOICE MODE button until “LOOP OFF” appears.

Note: The test loops until the VOICE MODE button is held down, or the O/ID button is pressed, or after 5 minutes of no change in the test results

5. Trouble-shoot if cable faults (open, short, fail, or split) are detected.

- The pins experiencing error(s) appear in the Wire Map of the display screen.
- Refer to the LCD Display Screen section for details of the cable faults.

Note: If the cable is a properly wired, reverse-pinned voice cable, the “Rev” symbol will illuminate and blink in the LCD screen. The Wire Map will display the reverse wired pin connections.



TESTING VIDEO CABLES

1. Connect the provided F-Connector coupler to the F-Connector at the top of the main tester (see Figure 6 below).



Figure 6. F-Connector on Main Tester

2. Screw one end of the video cable into the F-Connector coupler.
3. Secure a Coax remote to the opposite end of the video cable.
4. Press the VIDEO MODE button to start continuous testing. The following updates appear in the LCD display screen (see Figure 7):
 - The “Video” icon illuminates in the upper right corner.
 - A progression of “o’s” appear on the bottom of the display to indicate active testing.
 - The cable wiring structure displays (Pass, X-over, or Rev).
 - The “ID” icon appears with the Coax wire mapping remote number to its right.

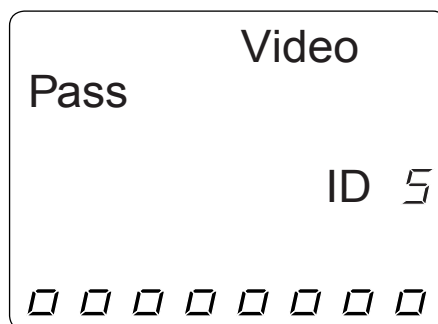


Figure 7. Loop Testing in Video Mode

Note: The tests run until the O/ID button is pressed or when 5 minutes elapses with no change in the test results.

5. Trouble-shoot if cable faults (open or short) are detected.

CableMaster 400

TESTING DATA CABLES

Testing a data cable is a 2-end test where one end is connected to the main tester and the other end is connected to the remote tester.

1. Plug one end of the data cable into the RJ45 jack on the main tester.



Plug the cable into the appropriate jacks on the main tester and remote tester. Failure to do so can damage the connectors.

2. Insert the opposite end of the cable into the RJ45 jack on the remote tester.
3. **Single Test.** To run a single test, press the DATA MODE button. The following appears in the display screen (see Figure 8):
 - The “Data” icon appears at the top of the screen.
 - The cable wiring structure displays (Pass, X-over, or Rev).
 - The “ID” icon appears with remote #1 displayed as the cable is connected to the remote tester.
 - The Wire Map fields update to indicate any cable faults. A perfectly wired data cable will display all pins (1-8) in both fields of the Wire Map display.

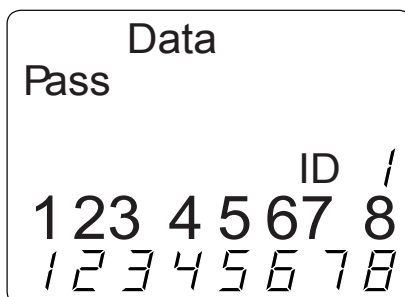


Figure 8. Data Mode Test

4. **Continuous Test.** To run a continuous test on the data cable, press and hold down the DATA MODE button until “LOOP ON” appears in the screen. When looping is active, three small moving “bars” appear on the right side of the display screen. The display screen will update with the icons and values that appear during a single test.
 - The turn OFF loop testing, press and hold down the DATA MODE
 - button until “LOOP OFF” appears (see Figure 9).



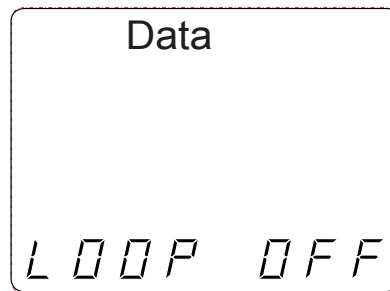


Figure 9. Loop Off in Data Mode

Note: The test loops until the DATA MODE button is held down, or O/ID button is pressed, or after 5 minutes of no change in the test result.

5. Interpret display results and trouble-shoot potential cable faults.
 - The pins experiencing error(s) appear in the Wire Map of the display screen.
 - Refer to the LCD Display Screen section for details of the cable faults.

Note: The “X-over” symbol will appear if a properly wired (uplink) data cable is detected. The Wire Map will show the pin connections with the crossover. Refer to the LCD Display Screen section for details

USING ID MODE

The ID functionality of the CableMaster identifies cables using remotes. Each remote is numbered sequentially to help you easily identify cables.

1. Make sure the CableMaster is turned OFF.
2. Insert the cable plug into the corresponding receiver on the main tester (RJ11 jack for voice cables, RJ45 jack for data cables, F-Connector for video cables).
3. For data or voice cables, insert a Network or Voice wire mapping remote into an RJ Jack wall port. For video cables, attach Coax wire mapping remote(s) to the F-Connector coax wall receiver.
4. Press the O/ID button to turn the tester ON and enter ID Mode. Wire mapping results display as follows:
 - A progression of “o’s” appear on the bottom of the display to indicate ID Mode is active.
 - If wire mapping remotes are found, the connector type illuminates and a numeric value (1 to 19) appears in the ID field of the display screen showing the wire mapping remotes that match the connected cable (see Figure 10).
 - If wire mapping remotes are not found, “Open” displays in the LCD screen.

- If multiple wire mapping remotes are found, the ID or fault is displayed automatically in sequence

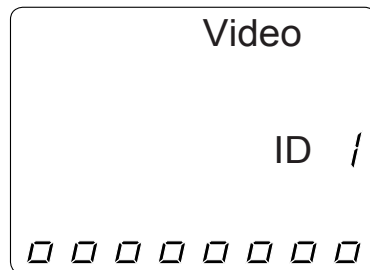


Figure 10. Detected Coax Remote

USING TONE MODE

Tone Mode is used to trace cable runs and locate faults by sound. Selection of this mode emits a cadence from the main tester through the connected cable. The tone is detected by a tone tracer probe (sold separately. Refer to the Additional Accessories section).

Note: It may be impossible to differentiate between the tone generated from the test pair and the sound emitted by neighboring wiring pairs within the cable.

1. Connect one end of the cable to the main tester. The remote tester is not used.
2. Press the TONE MODE button.
3. To select a Tone Cadence, press the TONE MODE button repeatedly to step through the 4 cadence options: HI, LO, Hi-Lo1, and Hi-Lo2. Stop when you reach the option you want.

The option you select determines the cadence sent from the main tester, through the cable, and picked up by the tone tracer probe.

Note: If you do not adjust the cadence, the main tester will default to the last selected cadence.

4. Press the appropriate cable type button (voice, video, or data) to select a cable for the tone signal.
5. Press the cable type button again to select different combinations of pins to carry the tone signal. Each press of the cable type button steps you through the cable's wire pairs. The selected pin pair appears in the Wire Map. Figure 11 shows pin pairs 1 and 2 selected for testing a data cable. The following appears in the LCD display screen:

- The cable type icon appears at the top of the screen.
- The “Tone” icon displays in the upper right corner of the screen.
- Three progression bars appear above pins 7 and 8 demonstrating you are in active Tone Mode.
- The selected pin pairs appear in the wire map of the display screen.

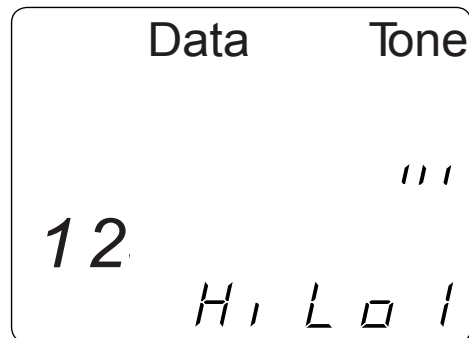


Figure 11. Tone Mode with Data Cable Selected and Hi-Lo1 cadence

Note: For tracing video cables, you must choose a tone path to transmit the cadence (pin (P), shield (S), or both (PS)). Continuous presses of the VIDEO MODE buttons steps through the tone path options. Figure 12 below shows “P” selection in Video Mode.

Note: It may be impossible to differentiate between the tone generated from the test pair and the sound emitted by neighboring wiring pairs within the cable.



Figure 12. Video Cable Test with Pin Selected

6. Use the tone tracer probe to locate faults and track wire runs behind walls, floors, and ceilings.

CableMaster 400

MAINTENANCE

BATTERY REPLACEMENT

1. Remove the single screw, located in the middle of the back of the CableMaster, with a #1 Philips head screwdriver.
2. Take out the old battery and disconnect the battery cable.
3. Replace the old battery with an ANSI 1604A, 9 volt alkaline battery (Energizer 522, Duracell MN1604). Reattach the cable to the new battery and place the new battery into the battery compartment.
4. Return the battery door to the unit and turn the screw into place to secure the battery door.



The CableMaster is designed for use on unenergized cabling systems. Connecting the CableMaster to live AC power may damage the unit and pose a safety hazard for the user.

CLEANING

Use a damp, clean cloth to clean the tester.



Disconnect all cables from the CableMaster prior to cleaning. Failing to do so can damage the unit and result in personal injury.



Do not use abrasive, harsh cleaners, or solvents to clean the CableMaster.

CLEANING

When the CableMaster is not in use, store it in a dry, protective case. The battery should be removed if the tester is stored for a long period of time.

Do not expose the CableMaster to high temperatures or humidity. When stored in temperatures exceeding the limits listed in the Specifications section, allow the CableMaster to return to the normal, recommended operating conditions prior to use.



CUSTOMER SERVICE




CONTACTING SOFTING IT NETWORKS

For technical information and support please contact the Softing Office in your country. Please see the last page of this manual or go to <http://itnetworks.softing.com>.

ADDITIONAL ACCESSORIES

Table 8 below lists the additional accessories that are available for purchase through Softing IT Networks GmbH. Contact Softing IT Networks GmbH for more information via email info.itnetworks@softing.com.

Table 8. Additional Accessories

Accessory	Description
	Tone Probe
	(1 – 19) Coax wire mapping remotes with 20 hole foam remote holder
	(1 – 19) Network wire mapping remotes with 20 hole foam remote holder

CableMaster 400

WARRANTY

Softing IT Networks GmbH warrants that the product shall be free from defects in parts or workmanship for a period of 12 months from the date of purchase if used in accordance with Softing IT Networks GmbH operating specifications.

THIS IS THE ONLY WARRANTY MADE BY Softing IT Networks GmbH AND IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

Should any parts or workmanship prove defective, Softing IT Networks GmbH will repair or replace at Softing IT Networks' option, at no cost to the Buyer except for shipping costs from the Buyer's location to Softing IT Networks. This is Buyer's SOLE AND EXCLUSIVE REMEDY under this Agreement. This warranty does not apply to products which have been subject to neglect, accident or improper use, or to units which have been altered or repaired by other than an authorized repair facility.

For European-Customers:

Return of Equipment – To return a product to Softing IT Networks GmbH, first obtain a Return Authorization number from our Customer Service by calling +49-89-45656660. The RMA# must be clearly marked on the shipping label.

To: Softing IT Networks GmbH
Richard-Reitzner-Allee 6
85540 Haar
Germany
RMA-Nr. XXXXXX

For North American-Customers:

Return of Equipment – To return a product to Softing inc, first obtain a Return Authorization number from our Customer Service by calling +1.865.251.5252. The RMA# must be clearly marked on the shipping label.

To: Softing Inc.
7209 Chapman Highway
Knoxville, TN 37920
USA
RMA-Nr. XXXXXX


For ASIA/PACIFIC-Customer:

Return of Equipment - To return a product to Softing Singapore PTE LTD, first obtain a Return Authorization number from Our Customer Service by calling +65-6569-6019. The RA# must be clearly marked on the shipping label.

To: SOFTING SINGAPORE PTE. LTD.
3 SCIENCE PARK DRIVE
#03-09 THE FRANKLIN
SINGAPORE SCIENCE PARK 1
SINGAPORE 118223
RMA# XXXXXXXX




SPECIFICATIONS

Specifications	Description
Physical Dimensions	Size: 16.3 x 7.1 x 3.6 cm (6.4 x 2.8 x 1.4 inches) Weight: 256 grams (9.0 oz) with battery and remote-end of tester
Power	1 9V alkaline battery Active: 425 hours Standby: 4 years
Maximum Voltage	Parameters refer to the maximum voltage that can be applied to any 2 connector pins without causing damage to the tester. RJ Jack: 66 Vdc or 55 Vac F-Connector: 50 Vdc or Vac
Operating Environment	Operating temperature: 0 to 50 °C (32 to 122 °F) Storage temperature: -20 to 60 °C (-4 to 140 °F) Humidity: 10% to 90%, non-condensing
Cable Types	Tester supports shielded or unshielded cables, Cat-7, Cat-6x, Cat-5E, Cat-5, Cat-4, Cat-3, and Coax cables.
Maximum RJ Cable Length	0 to 305 meters (1,000 feet)
Minimum Cable Length for Split Pair Detection	0.5 meters (1.5 feet)
Maximum Coax Cable Length	100 ohms maximum DC resistance, center conductor plus shield
Low Battery	Icon flashes when battery voltage falls below 6V
Compliance	Complies with Conformité Européenne directives. 


CableMaster 400

APPENDIX: CABLE WIRING AND DISPLAY SCREEN

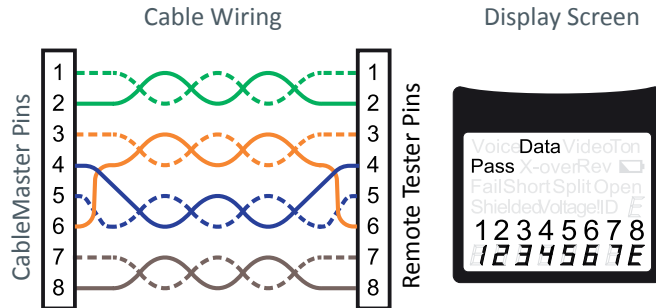

PROPERLY WIRED T568A DATA CABLE


T568B is electrically identical to T568A, but swaps the green and orange pairs. Either standard will work as long as the same standard is used at both ends of a run or patch cable. Missing standards A and B creates a cross-over cable. In the event of a cross over, the “X-over” icon will display and mismatched pins will flash in the wire map.

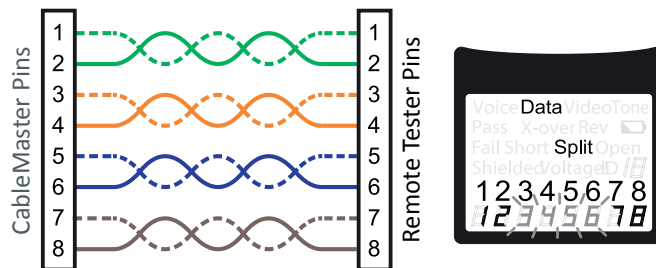

T568A DATA CABLE WITH SPLIT PAIRS


A common error in building a cable is to put all the wires in pin sequence - 1-2, 3-4, 5-6, 7-8. This will produce correct continuity, but the pairs are designated to be on pins 3-6 and 4-5 in the middle of the connector for compatibility purposes. As the designated wire pairs are not matched according to wiring standards, the “Split” error will appear. The mismatched pins will flash in the wire map of the LCD screen.



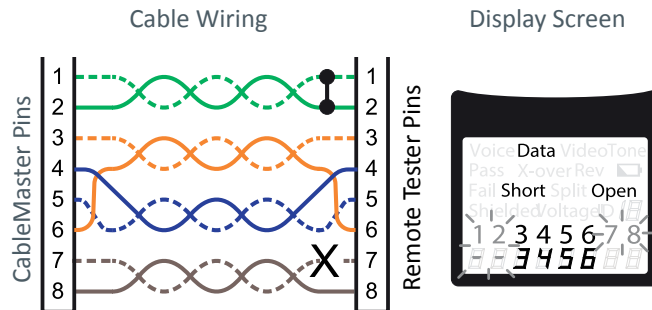

T568A CABLE WITH A SHORT AND AN OPEN

The 1-2 pair pins are shorted together and the 7-8 pair is open. The pins with the errors are flashing. Dash lines (-) on the bottom (remote) display line indicate the short, while no numbers on the bottom line indicate the open pair.

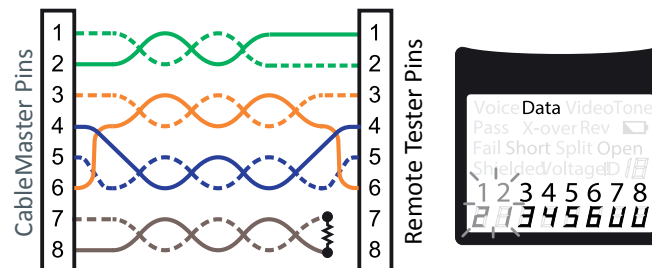

T568A CABLE WITH A MISWIRE AND UNRECOGNIZED CONTINUITY

1 and 2 pins on the main tester are connected to pins 2 and 1 at the remote-end. The pins with this error are flashing. The "U" for the remote pin numbers indicates an unrecognizable continuity was detected that is neither a short or open. An ID remote connected to the Tester when in cable test mode would also have shown this error.

CableMaster 400

NORTH AMERICA & CANADA

Softing Inc.
Knoxville, Tennessee
Phone: +1.865.251.5252
E-mail: sales@softing.us

ASIA/PACIFIC

Singapore

Softing Singapore Pte. Ltd.
Singapore
Phone: +65-6569-6019
E-mail: asia-sales.itnetworks@softing.com

China

Softing Shanghai
Shanghai
Phone: +86-21-54133123
E-mail: china-sales.itnetworks@softing.com

EUROPE/MIDDLE EAST/AFRICA

Germany

Softing IT Networks GmbH
Haar, Munich
Phone: +49 89 45 656 660
E-mail: info.itnetworks@softing.com

France

Softing SARL
Créteil, Île-de-France
Phone: +33145172805
E-mail: info.france@softing.com

Italy

Softing Italia Srl.
Cesano Boscone, Milano
Phone: +39 02 4505171
E-mail: info@softingitalia.it

Austria

Buxbaum Automation GmbH
Eisenstadt
Phone: +43 2682 7045 60
E-mail: office@myautomation.at

For technical information and support please contact the Softing office in your country.
<http://itnetworks.softing.com>

IT Networks

